

HOUSING MODIFICATION

Housing Modification for R.062 Insert

When using AOMT06020216R, check to ensure the cutter body does not protrude beyond the trailing edge of the insert. If it does, the housing corner can be modified on a lathe or grinder by removing material as illustrated below.

